





A. Setup


Humidification chamber preparation

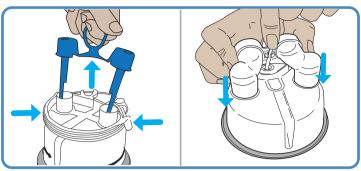


2 Chamber fitting

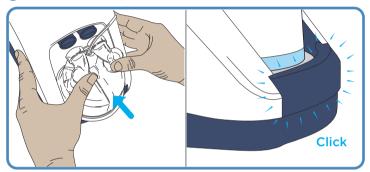

3 Water bag connection

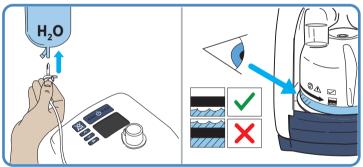

4 Breathing tube connection

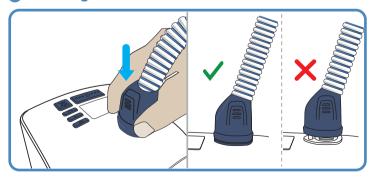














B. Start

Press 5 seconds

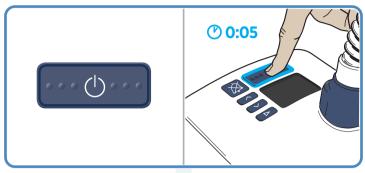







ROLLING CIRCLE: Warm up time



2 To activate/deactivate **JUNIOR MODE: Press 5 seconds**



3 For Target Flow and % O, settings see C







C. Settings



Access the target flow setting.



Move past the temperature setting menu.



Adjust target flow:



If the setting menu is locked (♠), unlock by pressing 3 sec:



Parameter setting adjustment





Exit the menu settings.





2 % O₂ Setting

Adjust the O_2 flow meter to change $%O_2$ value.



Note: This will NOT affect the delivered patient flow.



Read the measured % O₂ value.

3 When the target flow setting is adjusted:

New **target flow setting** adjustment (item 1) will change the **delivered** % O₂.

If required, adjust the % O₂ (item 2).

Patient Interfaces

Nasal Interface







OJR416 OJR418 OJR520

OPT970



OPT980

Available Target Settings

		_			9						
		Temp °C			Flow L/min						
		31	34	37	2	5	10	15	20	25 - 55	60
Junior Mod	de										
OJR416	L		•		2				20		
OJR418	XL		•		2					25	
Default Mode											
OJR520	XXL		•	•			10			50	
OPT942/ OPT962	S		•	•			10			50	
OPT944/ OPT964	М		•	•			10				60
OPT946/ OPT966	L		•	•			10				60
ОРТ970				•			10				60
ОРТ980		•	•	•			10				60

Turn off

Press 5 seconds



Cleaning and Disinfection

A. Clean the outlet elbow







C. Automatic disinfection cycle









